

# **HANDING of UNIT IS FIELD REVERSIBLE**

**See reverse side of this sheet  
or page 13 of Installation Instructions**




# INSTRUCTIONS - CHANGING THE HANDING OF THE UNIT

- A.** Remove the Battery Bracket Assembly (held on with 2 screws) and the Lock Bolt Housing Assembly (held on with 2 screws).




*Battery Bracket Assembly*

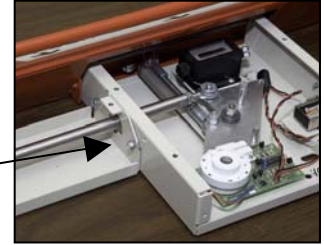


*Lock Bolt Housing Assembly*

- B.** Remove the Cotter Pin and Washers that secure the Lock Bolt Rod to the top post on the Pivot Plate.

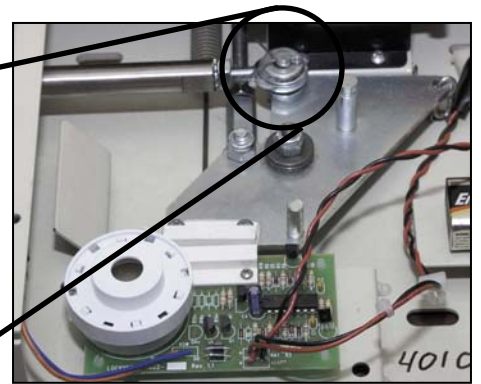

- C.** Remove the Lock Bolt Rod and reinstall it through the opening on the opposite side, securing it to the bottom post on the Pivot Plate using the Washers and Cotter Pin.

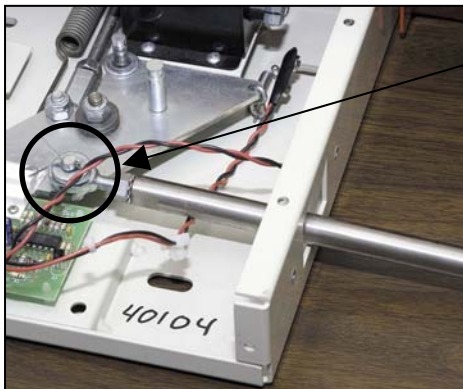

- D.** Reinstall the Battery Bracket Assembly and the Lock Bolt Housing Assembly on the opposite side of the unit from where they were originally installed.

*Battery Bracket Assembly*

*Lock Bolt Housing Assembly*

