


# HANDING of UNIT IS FIELD REVERSIBLE

Refer to both sides of this sheet or  
Appendix A of the Installation  
Instructions

- 
1. Remove the Battery Bracket Assembly and the Lock Bolt Housing Assembly (both are held on with 2 screws).




*Battery Bracket  
Assembly*

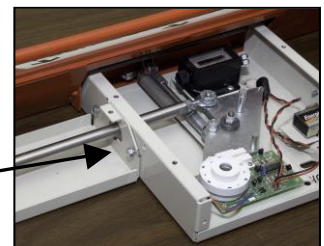


*Lock Bolt  
Housing  
Assembly*

... Continued


2. Remove the Cotter Pin and Washers that secure the Lock Bolt Rod to the top post on the Pivot Plate.

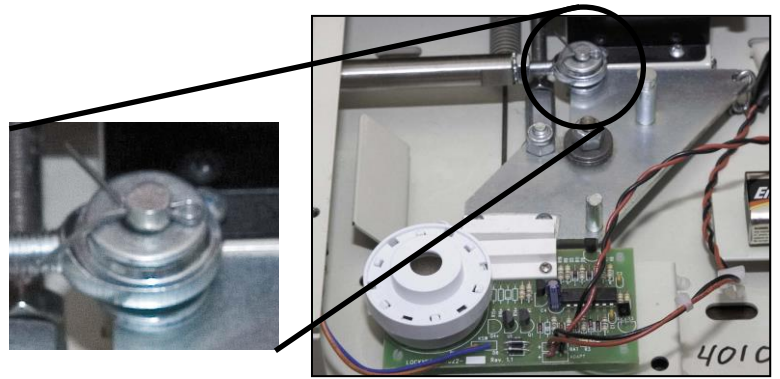


3. Remove the Lock Bolt Rod and reinstall it through the opening on the opposite side, securing it to the bottom post on the Pivot Plate using the Washers and Cotter Pin.

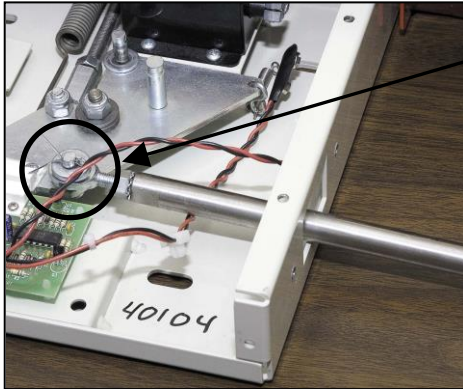

4. Reinstall and secure the Battery Bracket Assembly and the Lock Bolt Housing Assembly on the opposite side of the unit from where they were originally installed.

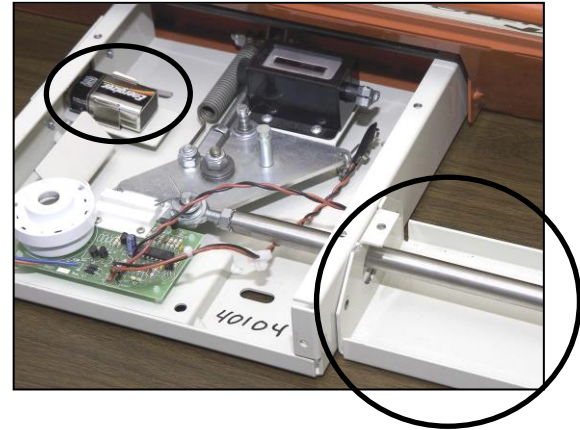

5. Reposition the clip that secures the battery wires to the unit, using caution so as to not pull the battery wires out of the Alarm Board. The clip should be positioned on the same side as the Battery Bracket Assembly. If the Battery Bracket Assembly's location is now on the left of the unit, route the battery wires below the Alarm.

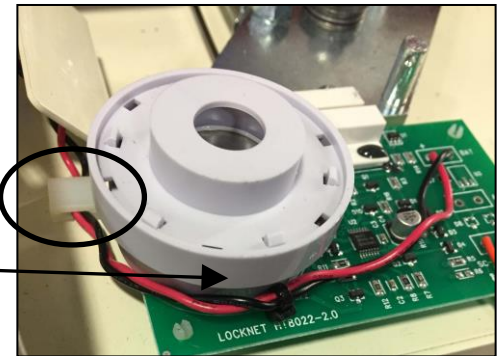

6. If the Battery Bracket Assembly is located on the left side of the unit, route the battery wires through the metal channel and up to the battery.

